OWNER'S MANUAL

CAR RADIO WITH STEREO CASSETTE PLAYER

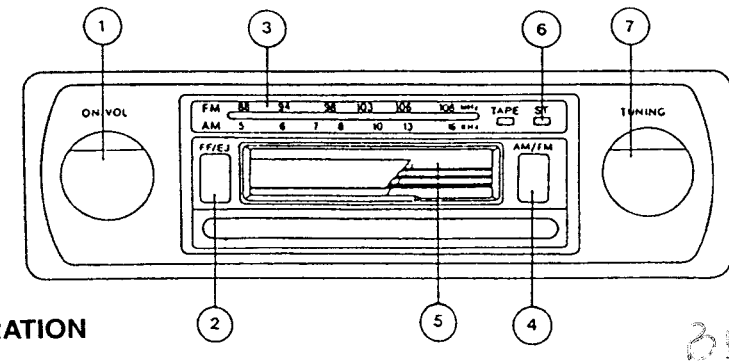

CONTROL OPERATION

1. VOLUME CONTROL
   Rotate the "VOLUME" knob to right for increasing the degree of sound.
2. FAST FORWARD / EJECT BUTTON
   To fast wind the tape push the button half way in, to eject the tape push the button fully in, resume the player in fast winding mode, push and release the button to "UP" position.
3. RADIO DIAL SCALE
4. BAND SELECTOR
   Push this button to select the desired band.
5. CASSETTE COMPARTMENT
   Hold the cassette lengthwise and insert it into the compartment to start cassette playing.
6. STEREO INDICATOR
   A glow of this indicator shown FM reception is in stereo.
7. TUNING
   Rotate this knob to select the desired station.

ELECTRICAL CONNECTION

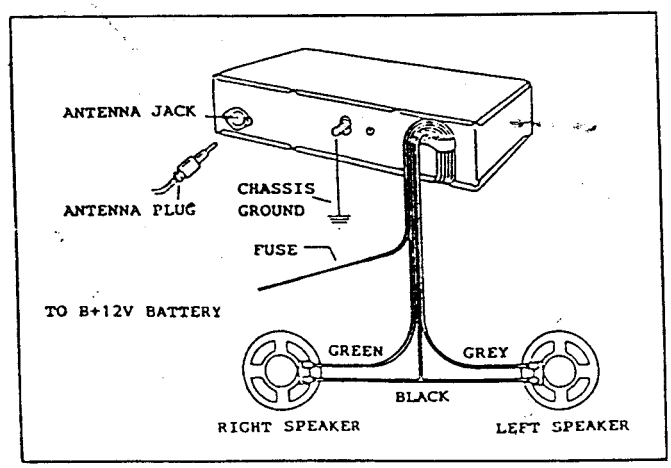

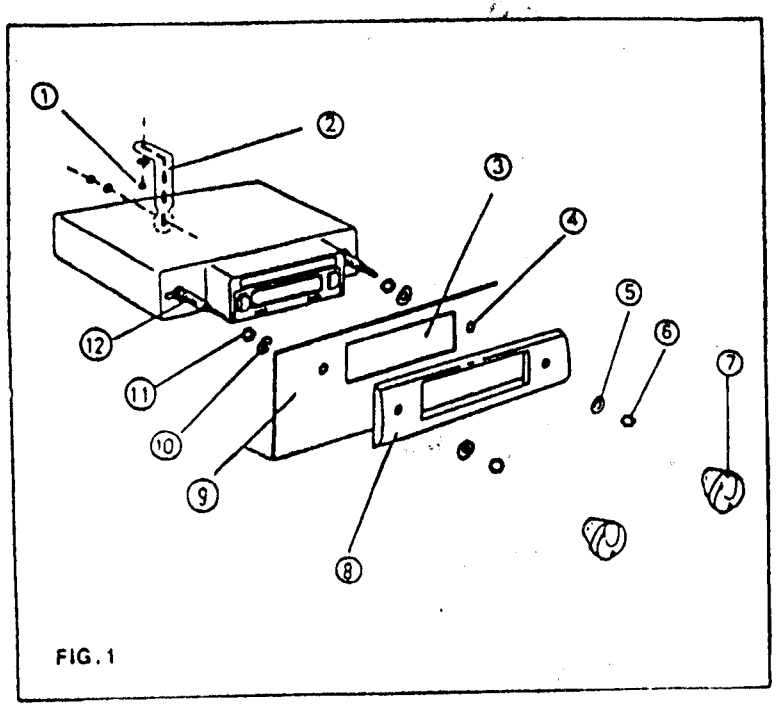

FIG. 1

SPECIFICATIONS	
AUDIO & GENERAL	
Supply Voltage	: 11 – 14 volts D.C.
Frequency Response	: 100 – 10,000Hz
Cassette Mechanism	: 4 Track Stereo with Auto -Stop
Dimensions	: 178mm(w) x 110mm(D) x 44mm(H)
Weight	: 0.8KG

1. Machine Screw
2. Rear Support Strap
3. Radio Opening
4. Control Shaft Opening
5. Flat Washer
6. Hex Nut
7. Front Knob
8. Trim Plate
9. Instrument Panel
10. Flat Washer
11. Hex Nut Spacing
12. Control Shaft

SCHEMATIC DIAGRAM